

# **Skeet**

## **Wi-PICKLE USER GUIDE**

### **TO TURN ON THE Wi-PICKLE**

**PRESS AND HOLD THE HIGH HOUSE  
BUTTON TILL BOTH LOW HOUSE AND  
HIGH HOUSE LIGHT GLOW STEADY  
AND RELEASE IMMEDIATELY**

### **TO TURN OFF Wi-PICKLE AFTER EACH USE**

**PRESS AND HOLD THE HIGH HOUSE  
BUTTON TILL BOTH LOW HOUSE AND  
HIGH HOUSE LIGHT GLOW STEADY  
AND RELEASE IMMEDIATELY AFTER  
THEY GO OUT**